

# SUNMI Cash Drawer Trigger

Directly open your cash drawer from your tablet or POS system.

## USB and Bluetooth Enabled

Use it to open a cash drawer directly using your tablet, laptop or computer. A 5V USB port is enough to power it to open a 24V cash drawer.

## Compatible With Multiple Systems

It can work with devices running Windows, Android or iOS and all types of cash drawers on the market.

## Short Circuit Protection

It only opens a cash drawer without short circuit as verified by a detection running automatically after the trigger is connected to a power supply.



## Two connection patterns available:

1. Bluetooth: suitable for taking payments with a tablet.



2. USB-A: suitable for taking payments with a desktop POS terminal.



## Cash Drawer Trigger Tech Specs

### Input

Type-A USB, 5V/2A

### Bluetooth

BLE 5.0

### Indicator Light

Power indicator, Bluetooth indicator

### Cash Drawer Output

RJ12, 24V/1A, 100ms

### OS

Windows  
(USB CDC and BT BLE modes supported)  
Android  
(USB CDC and BT BLE modes supported)  
iOS  
(BT BLE mode supported)  
macOS  
(USB CDC mode supported)

### Compatibility

Windows: open by shortcut icon, OPOS driver, or serial port command.  
Android: open by SDK driver.  
iOS: open by SDKdriver.  
macOS: open by serial port command.